

FRANK'S ENGINEERING





SUPPLIER TO DRIVING SCHOOLS &
OF CAR CONTROLS FOR THE DISABLED

Ph: (03) 9354 0400


135 BAKERS ROAD, NORTH COBURG 3058

LEFT FOOT ACCELERATOR

The Left Foot Accelerator is suitable for those requiring acceleration with the left foot. The floor mounted design can easily be fitted and removed by the user thanks to the quick release function. Simply lifting the quick release latch and sliding back releases the unit and returns the vehicle to the traditional right foot accelerator pedal. The easy, reliable and quality solution when it comes to left foot accelerators.

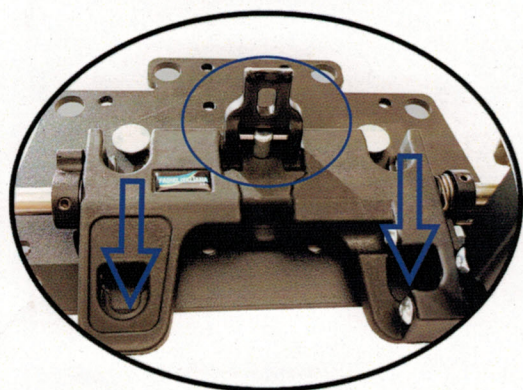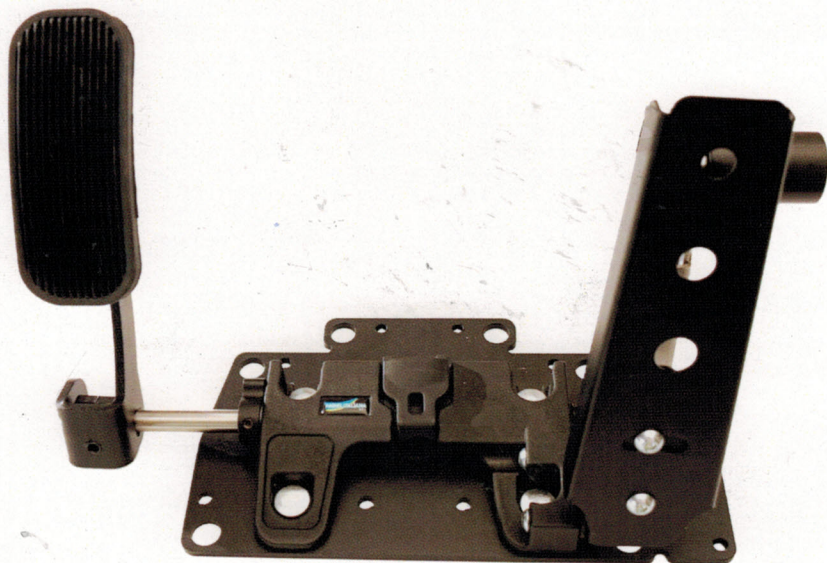


Quick release un-latched and ready for easy removal

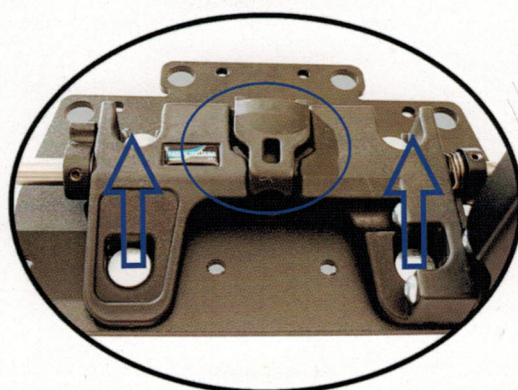

Quick release latched, secured and ready for use

FEATURES

- Floor-mounted design for compatibility with new vehicles
- Steel 4-pin fixation guarantees secure and easy mounting
- Quick release latch avoids inadvertent removal
- Multiple adjustments to ensure correct & smooth operation
- Universal fitting kit provided
- Made in Italy by Fadiel Italiana

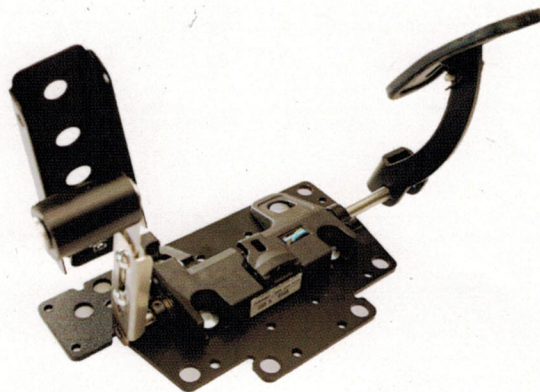

FADIEL ITALIANA
S.R.L.

FRANK'S ENGINEERING



SUPPLIER TO DRIVING SCHOOLS &
OF CAR CONTROLS FOR THE DISABLED

Ph: (03) 9354 0400

135 BAKERS ROAD, NORTH COBURG 3058